


## P-CLIP | Safety Tensioner Device



### P-CLIP Safety Tensioner Installation Instruction


1. Force the clip close and slide bead chain into hole or pull cord into hole.

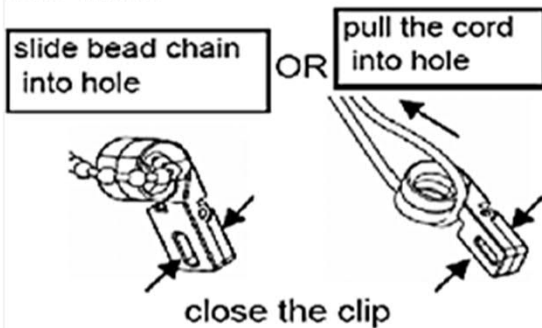


2. Leave tensioner locking on the chain/cord before installation.



3. Before install tensioner on mounting surface, use cable tie to close the clip. Locate tensioner properly, holding the chain/cord loop taut but allowing chain stopper go through.

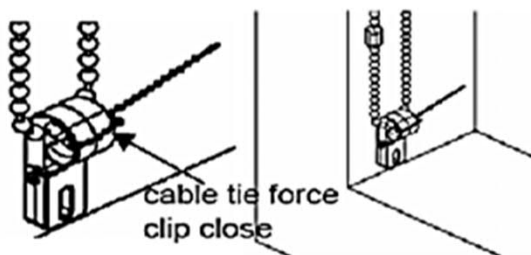

4. Fasten screws, then cut off the cable tie and dispose it properly.

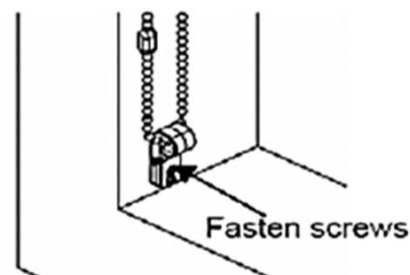

For wood substrate: Use supplied screw

For dry wall substrate: Use supplied screw and plug

For sheet metall substrate: please use sheet metal screw, Pan Head, Phillips Drive, #6, 1 1/4" long

**Warning: If any screw is loose, retighten screw for safety purpose**